


Optical Power Regulator Manual

(Low Output Optical Power Version<1W)

1/24/2022

1. Introduction

The NOPR nano-second speed VOA and a tap PD monitor automatically lock optical power output to a constant set value. The output power level has an adjustable range for customers to vary and set the value. Below is an instruction on how to do it.

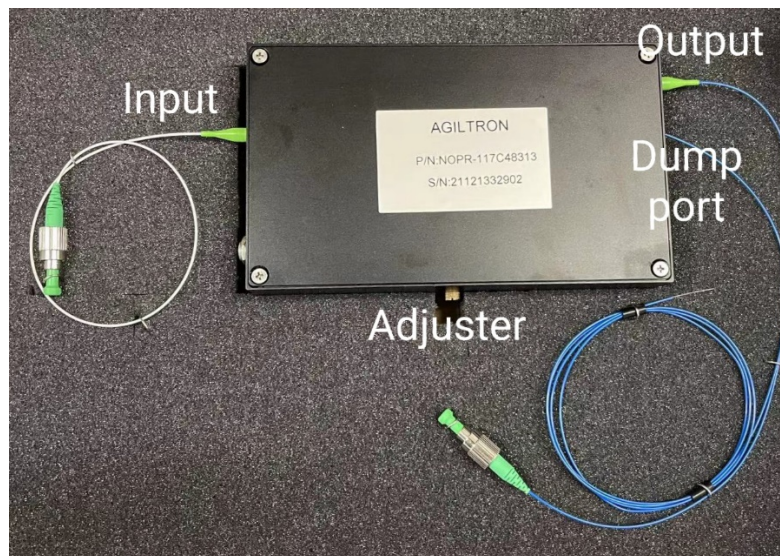

2. Operating

- 2.1 First, connect input fiber and output fiber. Input fiber is white on the left shown in the picture; output fiber is on the right side.
- 2.2 Plug in 12V power adaptor comes with the device. Use the power cord packed in the package connected to the module.
- 2.3 The default output power was pre-set at the factory per customer requirement. Change the manual variable attenuator (Adjuster) for a different out power setting.

2.4 Unplug DC 12V power adaptor to turn off the unit.

3. Optical Specification

Parameters	Min	Typical	Max	Unit
Operating wavelength range				nm
Insertion Loss				dB
Polarization Dependent Loss				dB
Operating Temperature	-5		70	°C
Storage Temperature	-40		85	°C
Operating Optical Power				W
Factory Output Setting				dBm

Part Name: _____

Part No.: _____

Serial No.: _____

Tested by: _____

Date: _____

QA: _____

Date: _____

WARNING

Don't touch the driving board during operation to avoid high voltage electric shock or static damage to the chips.