
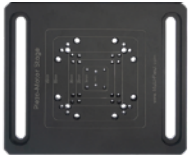
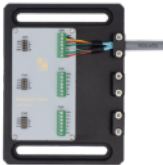


Accessories List

PM.LT.ToolBox.Basic		Basic version of ToolBox
Interconnect		Used to mount positioner with cross-mounting of different series positioner
Vertical Orientation		Used to mount positioner with cross-mounting of different series positioner
Installation Plate		Used to directly connect on an optic table for positioner
PinsPlate		Used to directly connect on an optic table for positioner
FTC		Used to keep sample cold when piezoelectric positioner moving in vacuum environment

Accessories - ToolBox.Basic

Piezoelectric Motion - Low temperature series - Accessories

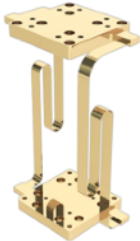

PM.LT.ToolBox.Basic

items	Specification	Quantity
1 Screws -BeCu	Compatible with 30 mK & 35 Tesla M1.6, M2 suitable	One set
2 Connectors	Compatible with 30 mK & 35 Tesla	One set
PA - standard	2pins, 3pins and 4pins	
Peek - UHV compatible	4pins - BeCu pins, Peek main body	
3 Tools	Multifunction screw driver Tweezers	One set
4 USB-Driver	Manual, software etc.	1 pc